


Caslan Roman Shade Measuring Instructions

Measuring Inside Mount (IB) Shades:

Measure the exact width (A) and length (B) of the window opening as shown. The factory will deduct 3/8" overall from the window width for clearance. On all inside mount shades, a small light gap will be visible.

Measuring Outside Mount (OB) Shades:

Measure the exact width (A) and length (B) of the window opening you wish to cover. The shade should cover the window opening by at least 2" on both the width and length. To cover a window sill, provide a measurement (C) beyond the sill.

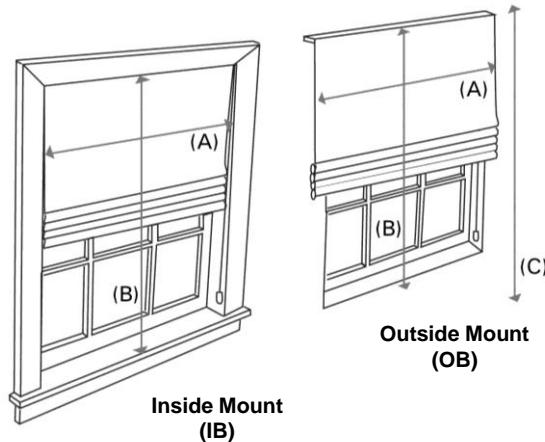

Caslan Roman Shade Specifications

Rail Depth:

- Standard Pull Cord = 1 1/2"
- Cord Loop Clutch = 2 1/2"
- Cordless = 2"
- Battery and 24-Volt Motorized Options = 2 1/2"
- 110-Volt Motorized Options = 3 1/2"

Stacking Height:

Flat Style	Hobbled Style
36" Drop = ± 6"	36" Drop = ± 9"
48" Drop = ± 9"	48" Drop = ± 12"
72" Drop = ± 12"	72" Drop = ± 15"
96" Drop = ± 18"	96" Drop = ± 21"

Hembar: 1 3/8" 3-Side Welded Pocket

Valance: 5 1/2" Fabric Valance with 1 3/8" 3-Side Welded Pocket

Roman Shade Price Table Listing:

Table 1	Table 2	Table 3	Table 4	Table 5
Atria	Brittany	Chalet	Sienna Silk	Avella
	Calista	Cassandra	Vectora	Catera
				Cassino
				Suede

All prices are in U.S. Dollars and do not include freight, duties or taxes for shipment to Alaska, Hawaii or Canada. GST and VAT are not included. Other restrictions and surcharges may apply. See Freight Policy for complete details.

Manufacturing specifications, options, surcharges and pricing are subject to change without notice.

Visit www.mariak.com for the most recent downloads.